

**BLOCKING OF THE MACHINE (All versions from Version 02)**

There is the possibility to lock or unlock settings of the programs of your FROMM Robot wrapping machine. The procedure to block or unblock will be explained hereunder.

**Blocking of the parameters**




To lock the machine, to prevent changing of the parameters for the programs. Push these 2 buttons together for 7 seconds.

**Unlocking the machine**



To Unlock the machine. Push these 2 buttons again together for 7 seconds.


After approx 7 seconds at the left and right side of the display will appear two different signs.

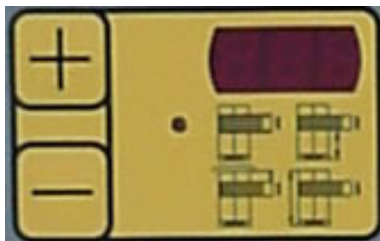

Left side: "0"

**By pushing the + and – buttons you have the possibility to enter a password.**

**Password leftside = 22**

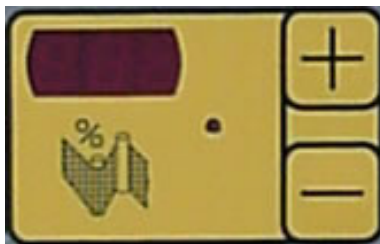

Right side: "0"

**By pushing the + and – buttons you have the possibility to enter a password.**

**Password rightside = 3**



After entering the correct password, push stop and your machine is unblocked.

We provide also the possibility to change the password in the case you lost the old one, or when your employees know the password, and due to this cause are changing the settings of your machine. These services can be given, for example during the yearly maintenance provided by a FROMM technician.

**Ask the sales wrap of FROMM for the maintenance conditions!**

For all programs before version 02:



To lock or unlock the machine  
Push these 2 buttons together for 7 seconds.