


## FS360/FS390 Machine, Assembled ramps and Base units

in all ramps you will find the adapter and the screws for assembly with all FS bases.

### For FS360/FS390 ramp to assembly in the base unit FS390 it is enough the screw and nut:

N1.1408 (Bolt M16x40)

N1.5112 (Nut M16)

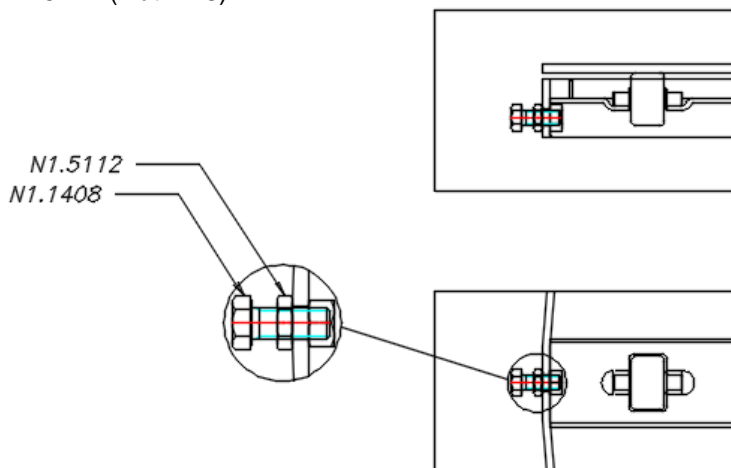

### For FS360/FS390 ramp to assembly in the base unit FS360:

FS4.1166 (adapter)

N1.5106 (Nut M8)

N1.5117 (Bolt M8x50)

