
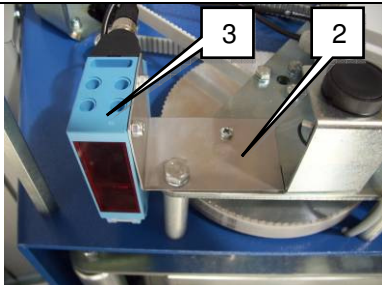



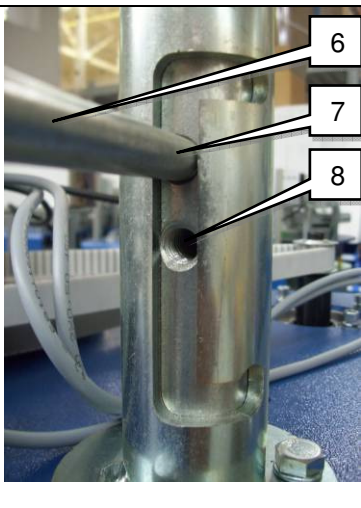


01.1 – FS4.1642Z BRACKET

Bracket to install the photocell N5.2651 into the carriage C7 of the FROMM FS4xx Stretch Wrapping machine:

<ol style="list-style-type: none"> 1. Remove the cover (1) from the carriage C7 (Fig. 1) 2. Mount the bracket FS4.1642Z (2) by fixing it on the corresponding holes (Fig. 2) 3. Install the photocell N5.2651, by disconnecting the old and connecting the new photocell, using the connector at the backside of the already installed photocell. (3) (Fig. 2 / Fig 3) 		
 <p>Fig. 1</p>	 <p>Fig. 2</p>	 <p>Fig. 3</p>

01.2 - FS4.1642Z BRACKET

<ol style="list-style-type: none"> 4. Enlarge the cover "photocell hole" with 35mm (4) (Fig. 3) Re-paint the cutted edges with color RAL 1021 Yellow 5. Re-install the carriage cover (5) (Fig. 5) 6. Re-fit the coreholder shaft (6) using one of the corresponding holes. Top or bottom fitting, for <u>LOWER</u> (7) or <u>HIGHER</u> (8) film cores (Fig. 6) 		
 <p>Fig. 4</p>	 <p>Fig. 5</p>	 <p>Fig. 6</p>