

Manual Assembly Instruction Motorgroup with shock-abosorber

This manual is done as effort to make life more easier to our distributor.
(Pay attention to the mounting bracket attached to polizene).



Fig.1 Unscrew big bolt



Fig.2 Unscrew the bolts that fix 3 plates (opposite side of the motor)

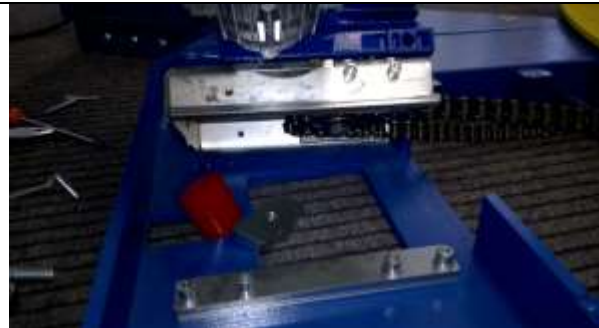


Fig.3



Fig.4 Insert N°1 M6 long screws (right side) to hold the rectangular plate



Fig.5 Insert N°1 M6 long screws (left side) to hold the rectangular plate

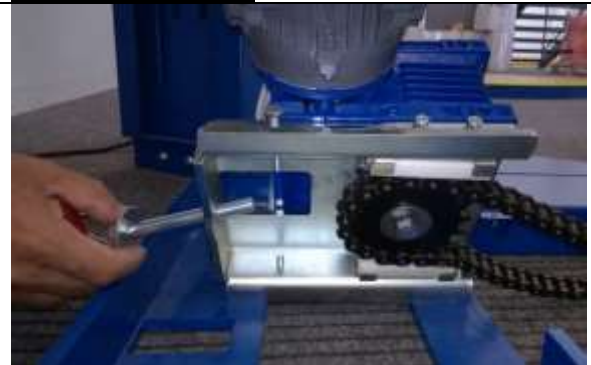


Fig.6 Insert big bolt

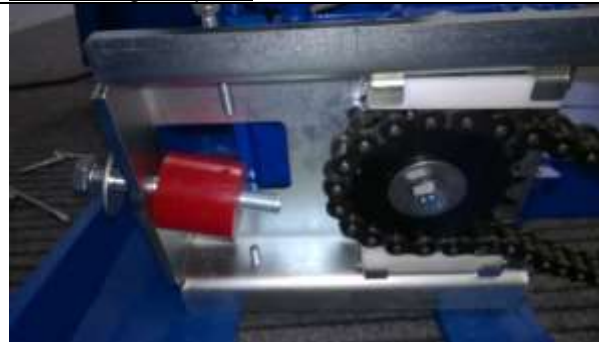


Fig.7 Insert red polizene



Fig.8 Screw to the rectangular plate



Fig.9 Put the group (big bolt - red polizene – rectangular plate) online with 2 M6 long bolts



Fig.10 Fix M6 long bolts to the rectangular plate



Fig.11 Unscrew big bolt

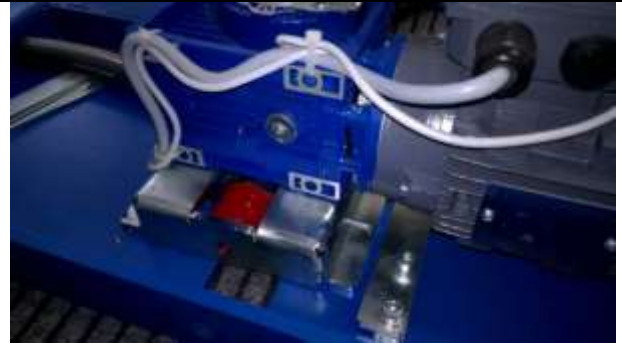


Fig.12



Fig.13 Fix all motorgroup with big bolt



Fig.14 Unscrew M6 long bolt (right side)



Fig.15



Fig.16 Unscrew M6 long bolt (left side)



Fig.17
Fix on the base 4 bolts



Fig.18
Adjust the tension of the chain using the big bolt.