TDS- Connection FS4.1642Z with N5.2651

01.1 – FS4.1642Z BRACKET

Bracket to install the photocell N5.2651 into the carriage FS4xx of FROMM Wrapping system:

1. Remove the cover (1) from the carriage (**Fig. 1**)
2. Mount the bracket FS4.1642Z (2) by fixing it on the corresponding holes (**Fig. 2**)
3. Install the photocell N5.2651, by disconnecting the old and connecting the new photocell, using the connector at the backside of the already installed photocell. (3) (**Fig. 2 / Fig 3**)

Fig. 1

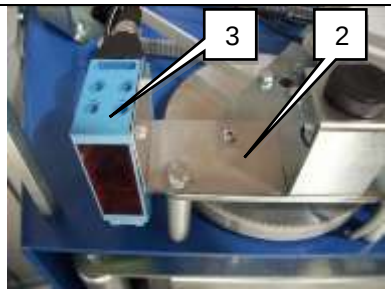

Fig. 2

Fig. 3

01.2 - FS4.1642Z BRACKET

4. Enlarge the cover “photocell hole” with 35mm (4) (**Fig. 3**)
   Re-paint the cutted edges with color RAL 1021 Yellow
5. Re-install the carriage cover (5) (**Fig. 5**)
6. Re-fit the coreholder shaft (6) using one of the corresponding holes. Top or bottom fitting, for <u>LOWER</u> (7) or <u>HIGHER</u> (8) film cores (**Fig. 6**)

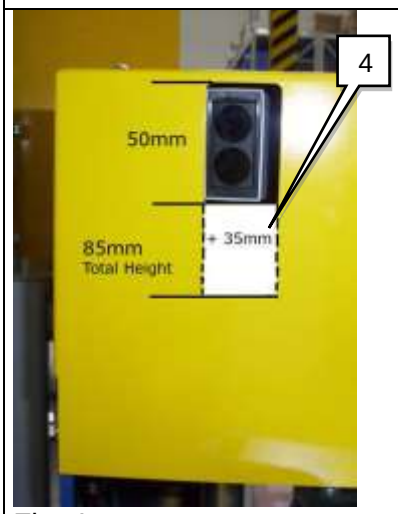

Fig. 4

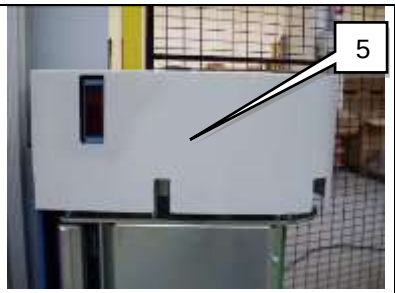

Fig. 5

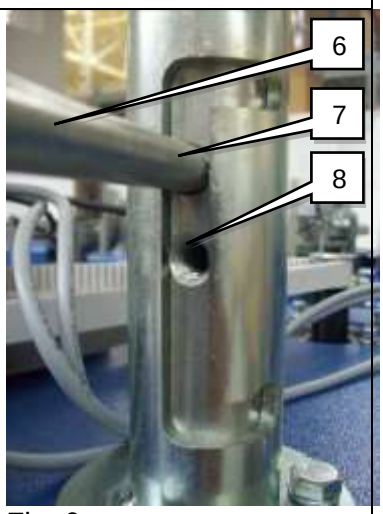

Fig. 6

FROMM Wrapping Systems S.r.l.
Viale del Lavoro 21
IT-37013 Caprino V.se. (VR)
ITALY

Office. 0039 045 205 7300
Fax. 0039 045 205 7373
info@fromm-stretch.com
www.fromm-stretch.com

Bank. Banca Popolare di Verona **|** IT-37010 **|** ITALY
Account Nr. 000000000227 **| Swift Nr.** IT-BAPPIT21130
Iban. IT11-W-05034-85830-000000000227
Vat Nr. 04146150232 **| EORI.** IT 04146150232